


Electrical Load Diagram

Air Conditioner Installed

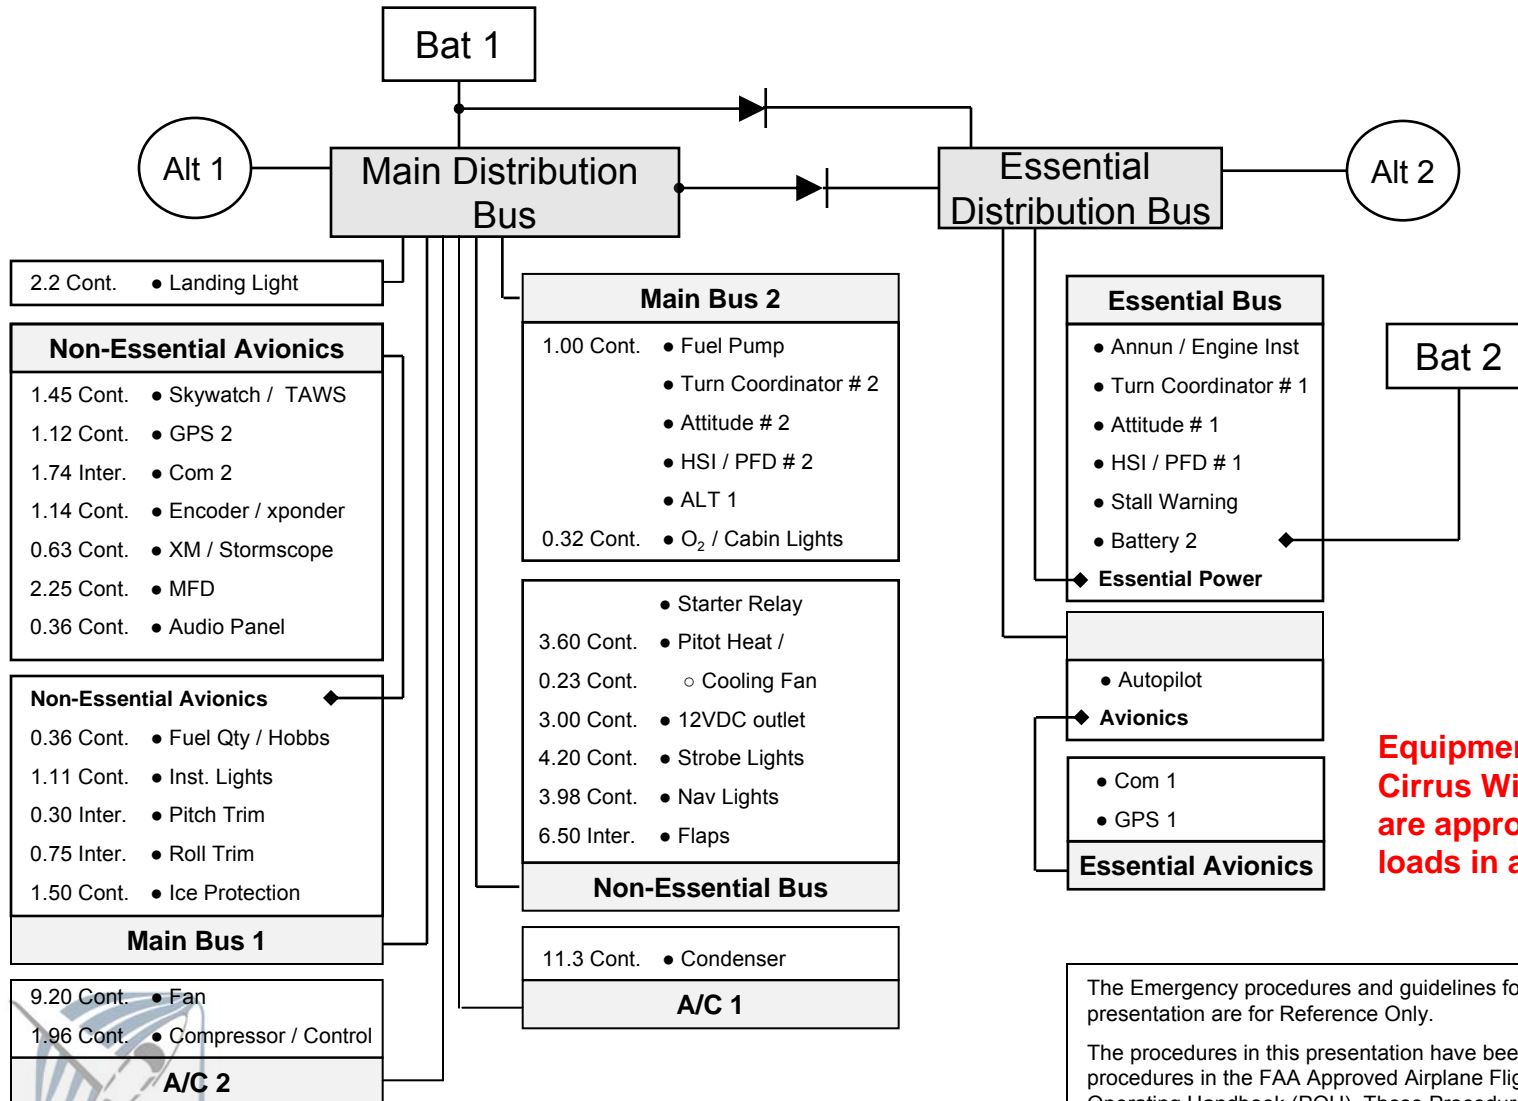

Equipment Loads are from Cirrus Wiring Manual and are approximate. Actual loads in aircraft may vary.

The Emergency procedures and guidelines found in this presentation are for Reference Only.

The procedures in this presentation have been taken from the procedures in the FAA Approved Airplane Flight Manual and Pilot's Operating Handbook (POH). These Procedures DO NOT SUPERSEDE the procedures in the POH. In the event of conflict, the POH shall take precedence.

